


COUNTERFLASHING FOR CONCRETE WALLS OR PARAPETS

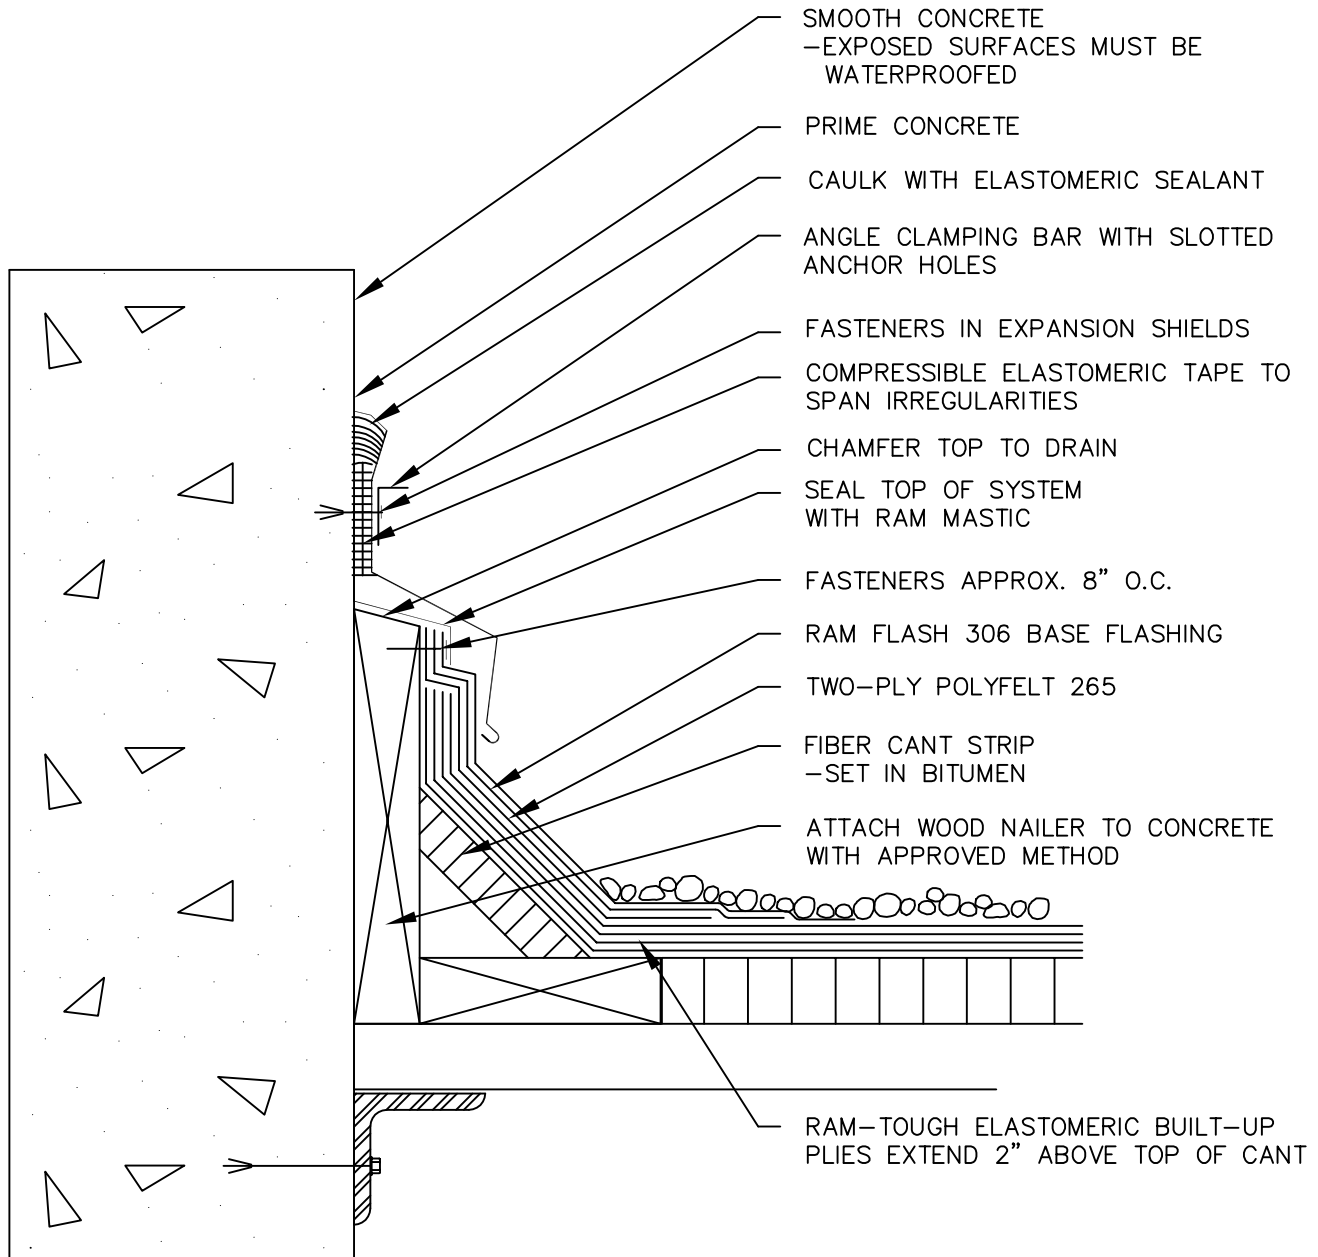

NOTE:

1. WHERE DECK IS SUPPORTED BY AND FASTENED TO THE CONCRETE WALL, VERTICAL WOOD NAILER SHOULD BE SECURED TO THE WALL WITH SUITABLE FASTENERS.



BARRETT COMPANY
BRT-FSEC.DWG
FOR TECHNICAL ASSISTANCE
CALL 1-800-647-0100