


STEP #3:


CUT TWO PIECES OF BLACK PEARL[®] MEMBRANE 4" LONGER THAN CIRCUMFERENCE OF PIPE.

EXAMPLE: A 3" PIPE CIRCUMFERENCE IS 9-1/2". CUT TWO PIECES OF BLACK PEARL[®] MEMBRANE 14" LONG BY 14" HIGH.

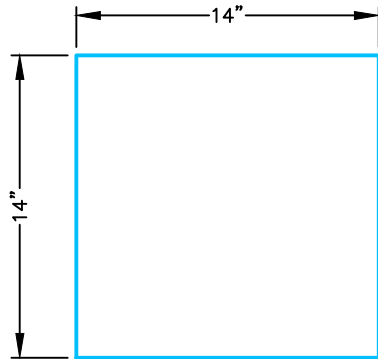

STEP #4:

CUT TABS APPROXIMATELY 1.5" WIDE AND 5" LONG ON EACH PIECE. FOLD ON THE 5" LINE.

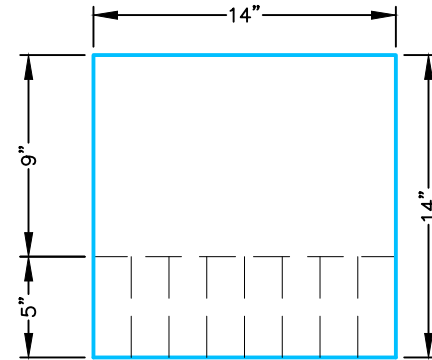


STEP #5:

APPLY BLACK PEARL[®] PRIMER-ADHESIVE 10" UP THE PIPE AND 6" OUT ON THE DECK SURFACE. APPLY THE BLACK PEARL[®] SHEET AROUND THE PIPE AND 5" ON THE DECK. COAT WITH BLACK PEARL[®] PRIMER-ADHESIVE. APPLY THE SECOND PIECE OF MEMBRANE 5" ON THE DECK, STAGGERED OVER UNDERLYING LAPS.

STEP #6:

INSTALL RAM BOOT INTO BLACK PEARL[®] ADHESIVE AND STAINLESS STEEL WORMDRIVE CLAMP AT THE TOP OF THE FLASHING. (NOT ILLUSTRATED)

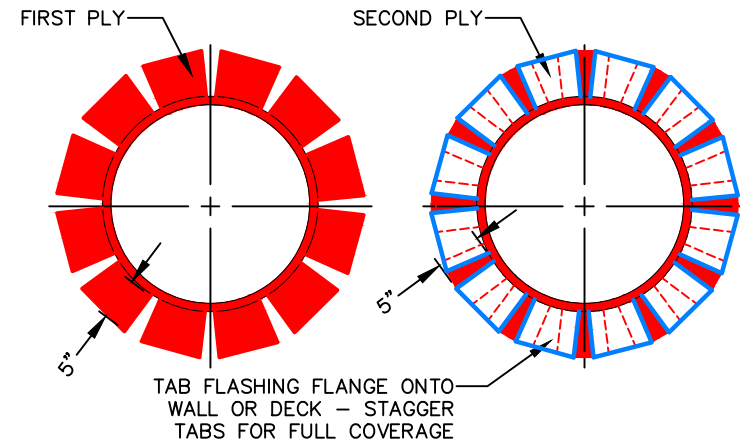

Between the World
and The Weather
Since 1928

1.800.647.0100

www.barrettroofs.com

BLACK PEARL[®]
WATERPROOFING SYSTEMS

PIPE FLASHING
DRAWING 2 OF 3
(DRAWING NOT TO SCALE)

DRAWING NUMBER:

BP-OG-31B

DATE ISSUED:

August 1, 2012