



FOUNDATION TERMINATION ABOVE GRADE

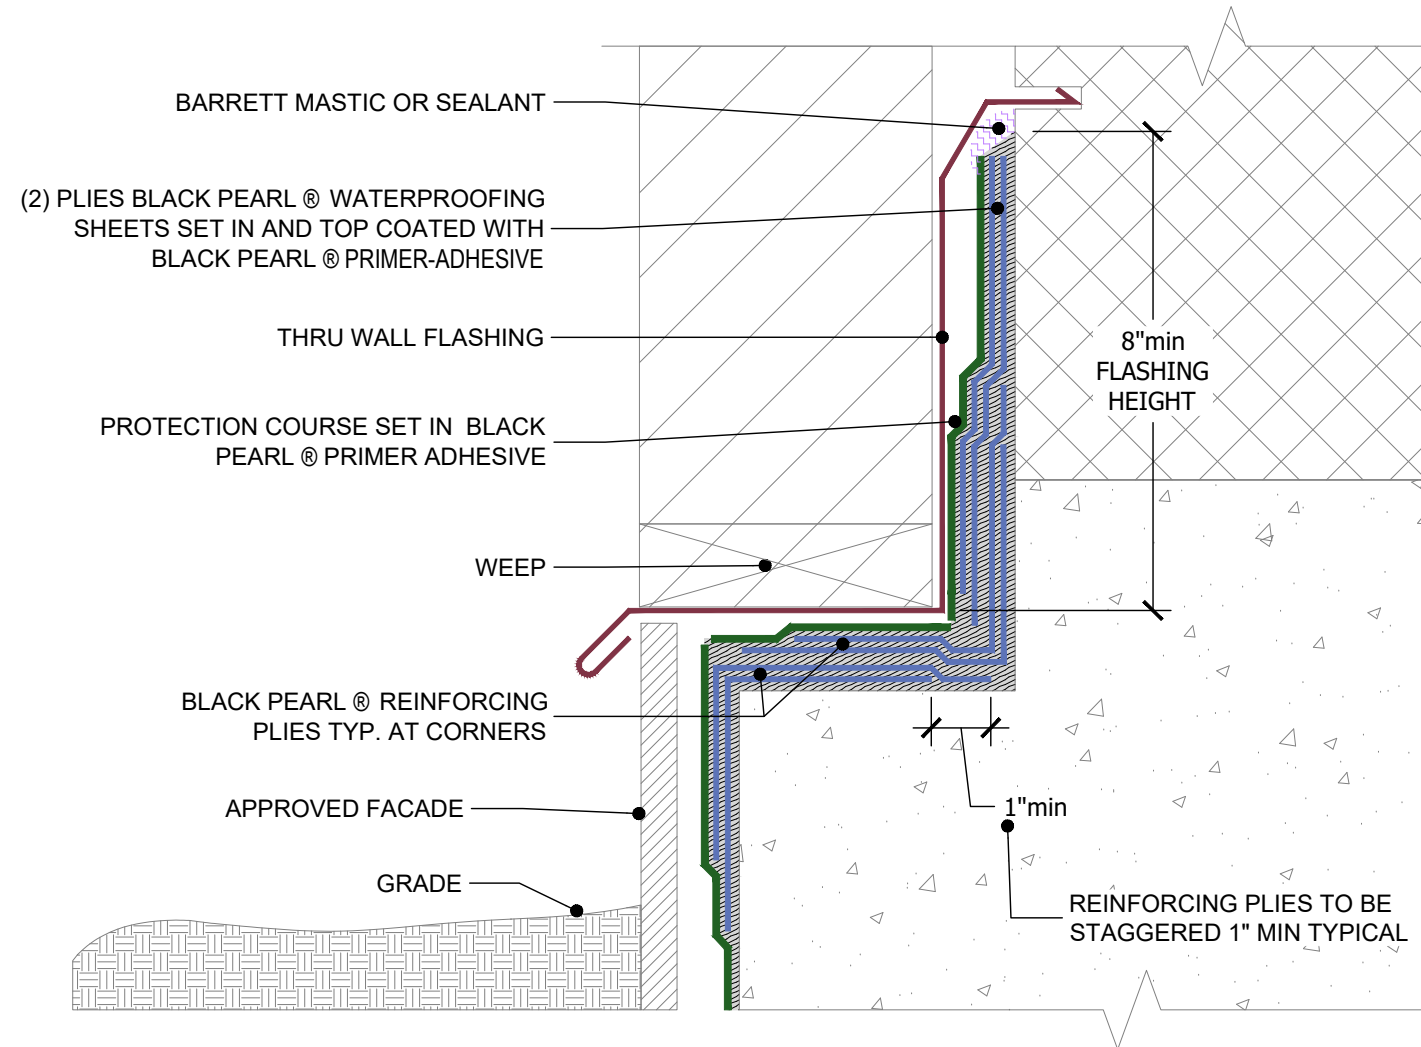

FOUNDATION TERMINATION BELOW GRADE

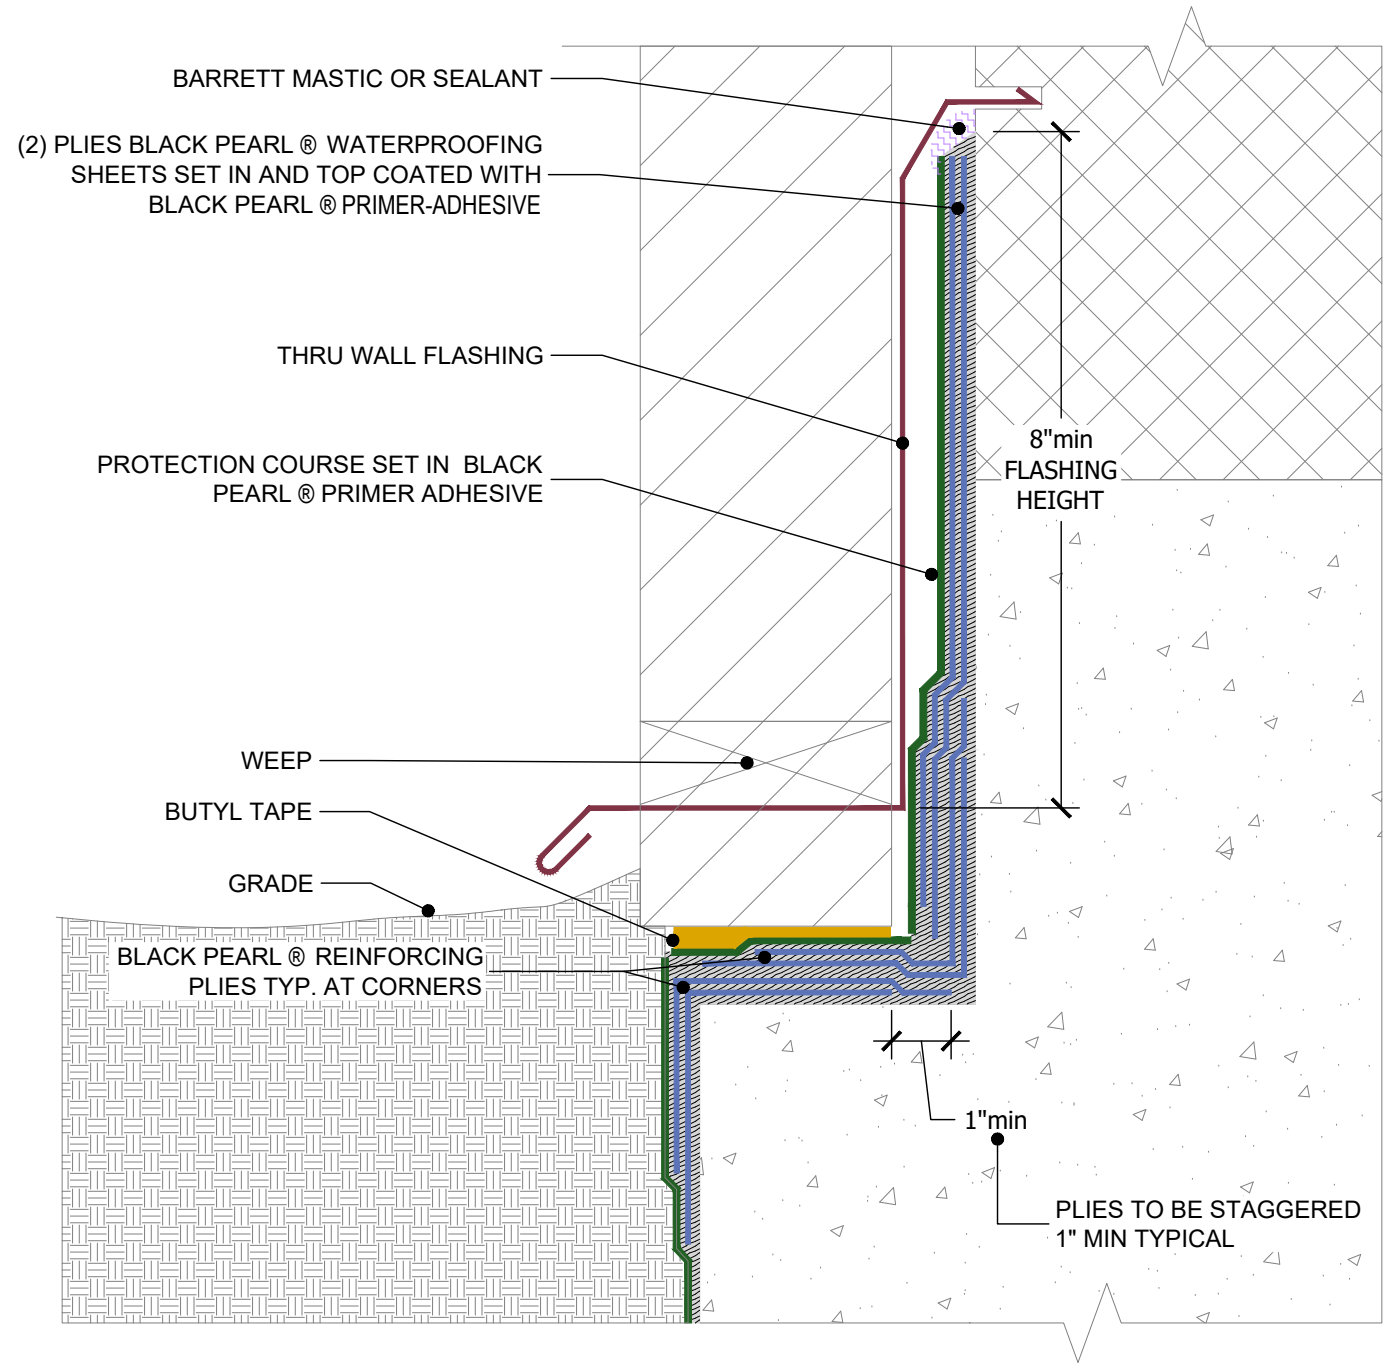

PREP
 CONCRETE DECKS MUST BE MADE REASONABLE SMOOTH, DRY, FREE OF DIRT, LAITANCE, CURING AGENTS, DEBRIS AND OTHER CONTAMINANTS.

BLACK PEARL - System Information

Black Pearl Primer Adhesive
 Apply 15-20 mils of Black Pearl® Primer Adhesive with a non-serrated straight edge squeegee at the rate of 45 sq. ft./gal. Allow it to dry to a tacky condition (approximately 20 minutes) before installing the Black Pearl® Sheet Membrane.

Black Pearl Primer Adhesive
Black Pearl Sheet Membrane
 Rub the sheet into the Black Pearl® Primer Adhesive with a stiff broom, squeegee, hand garden roller, or similar method. Lap all edge seams a minimum of 3 inches. Stagger all end laps a minimum of 6 inches. Coat the top of the first ply with 15-20 mils of Black Pearl® Primer Adhesive at the rate of 45 sq.ft./gal. Allow to dry to tack state.

Black Pearl Primer Adhesive
Black Pearl Sheet Membrane
 Smoothly embed the second ply, offsetting the side laps of the first ply by half a sheet's width. Any "Fishmouths" or wrinkles in the fabric need to be cut out and detailed.

RT250 - Additional Product Information and Components

- Black Pearl Primer Adhesive**
- Black Pearl Butyle Tape**
- Ram Protection Course (Ram 203,306,306FR)**
- BUTYL OR POLYURETHANE SEALANT**
 Ram Mastic, Keene Seal or Liquid Flash 100
- RamDrain Drainage Mat**



www.BarrettRoofs.com
 1-800-647-0100

DRAWN BY: LDS	SYSTEM: BLACK PEARL
DATE: 12.02.2024	CATAGORY: FO
DETAIL NAME: FOUNDATION TERMINATIONS ABOVE GRADE	TERMINATION DETAIL #: BP-FO-01